

# Q<sup>2</sup> RIM

DIRECTIONS:



Wash the rim with a strong degreasing agent.




Always use Q<sup>2</sup>M IRON while cleaning the surface.

If additional impurities like tar are visible, you can remove them with Q<sup>2</sup>M CLAY.

Use Q<sup>2</sup>M PREP before applying the coat (isopropyl alcohol does not fully degrease the surface).

# GYEON<sup>®</sup>

*quartz cloth*

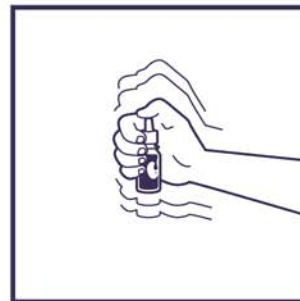

Shake the Q<sup>2</sup>RIM bottle well before use.



Apply a thick layer with the attached applicator.



Wipe off after 10 minutes.

The coat is fully dry after 24 hours. Only after that time can the car be driven.

Drying process can be shortened if the coating is heated with infrared lamps for 1 hour.

PRECAUTIONS:

- Skin protection recommended.
- Work in a well-ventilated area.
- Store in a dark, dry and cool place.
- Keep out of reach of children.
- Avoid applying in direct sunlight.